


Assembly instructions for air dried oak frames

IMPORTANT

Make sure all external joints are sealed with a continuous bed of Puraflex when assembling frame, to seal the joint. (to stop capillary action pulling moisture through the joint).

REMEMBER - it is difficult to retro seal a joint that hasn't been correctly sealed with Puraflex after the frame has been erected.

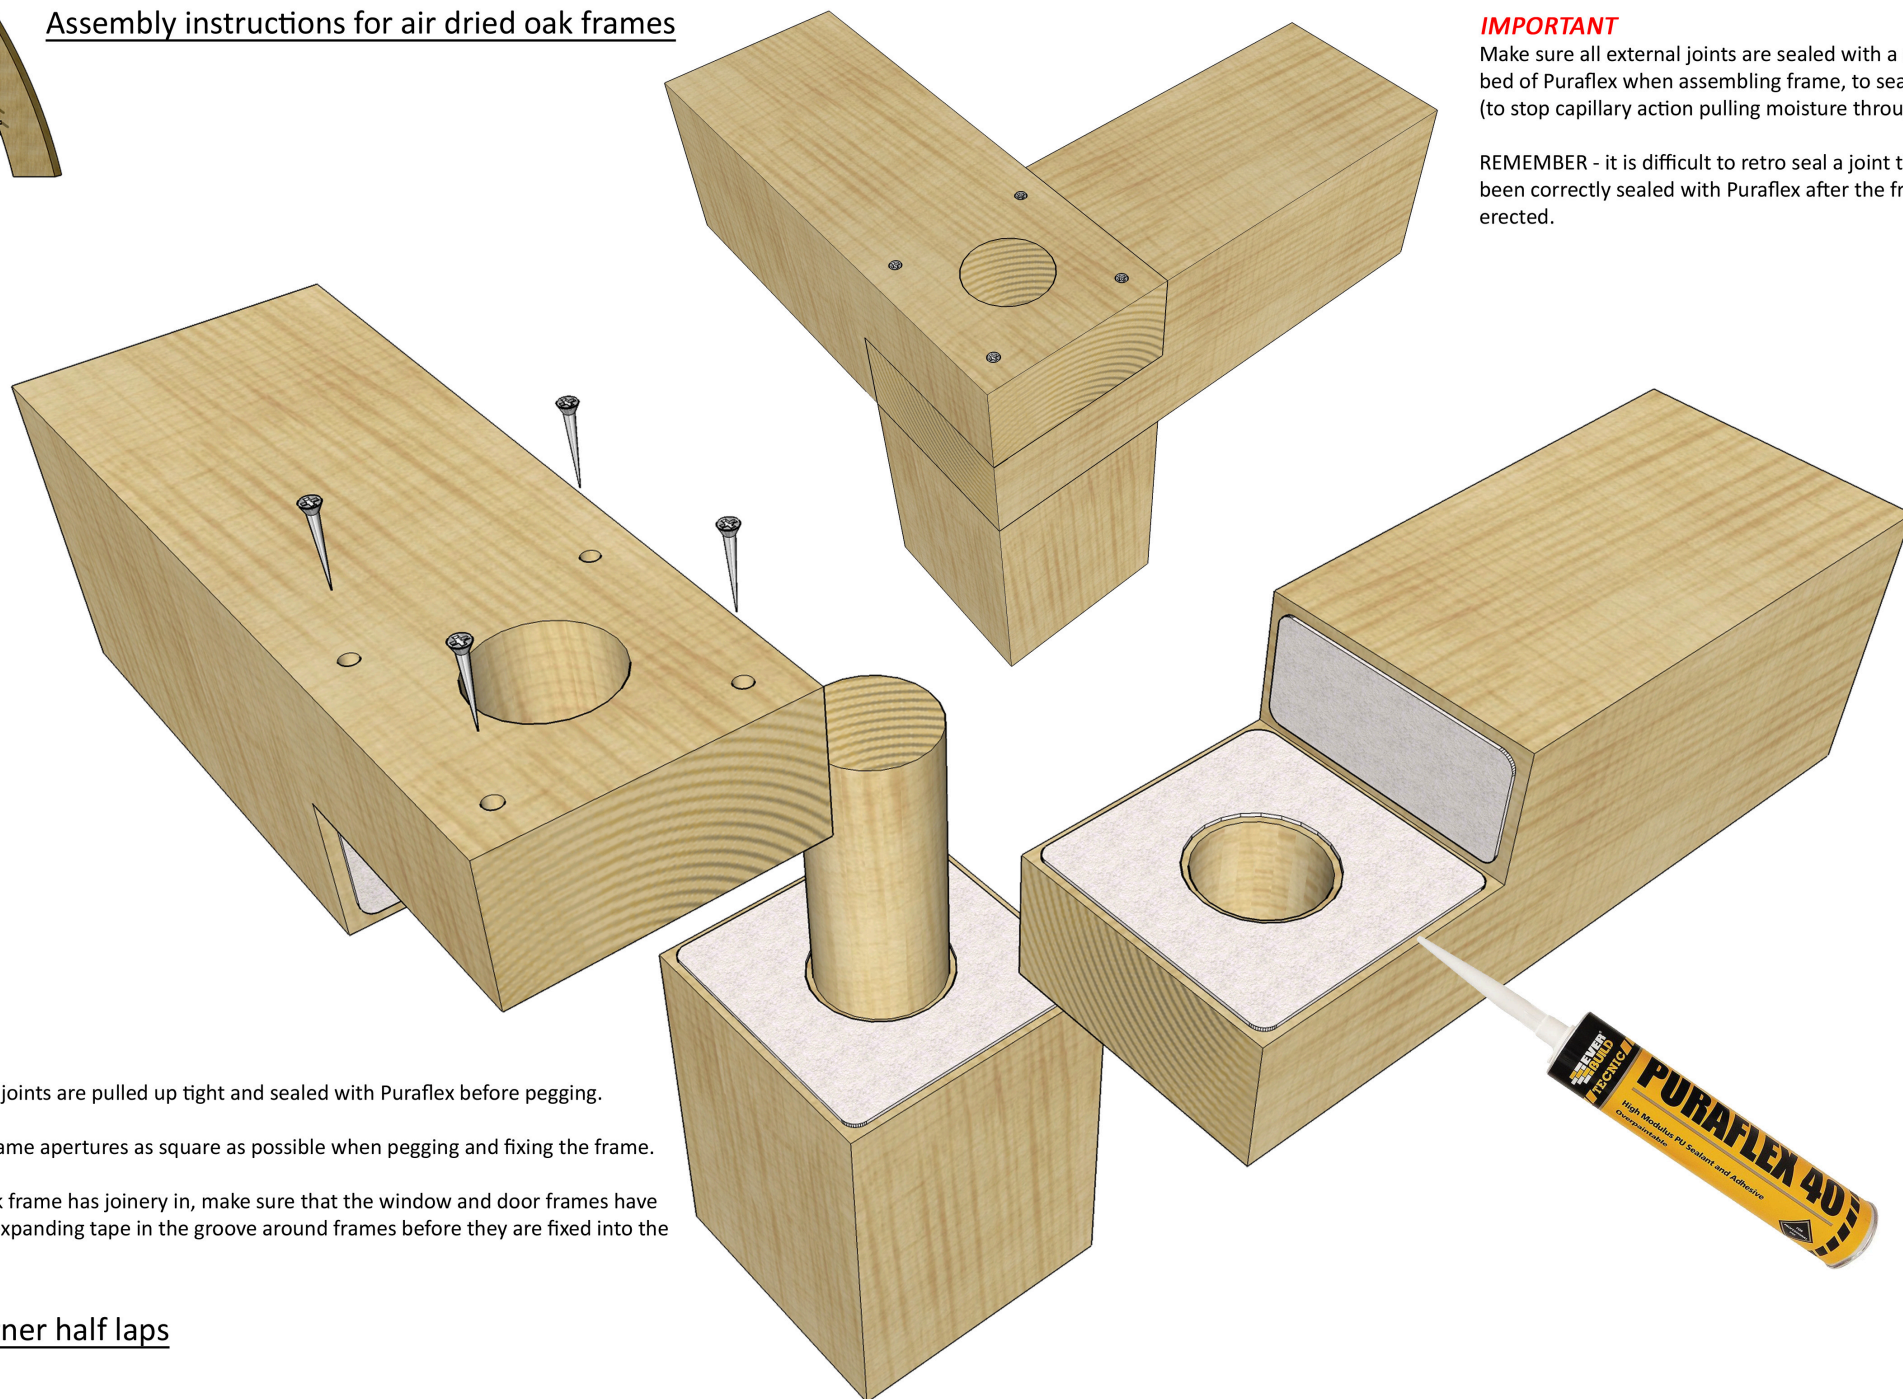

Make sure all joints are pulled up tight and sealed with Puraflex before pegging.

Try to keep frame apertures as square as possible when pegging and fixing the frame.

When the oak frame has joinery in, make sure that the window and door frames have compriband expanding tape in the groove around frames before they are fixed into the oak frame.

Corner half laps