

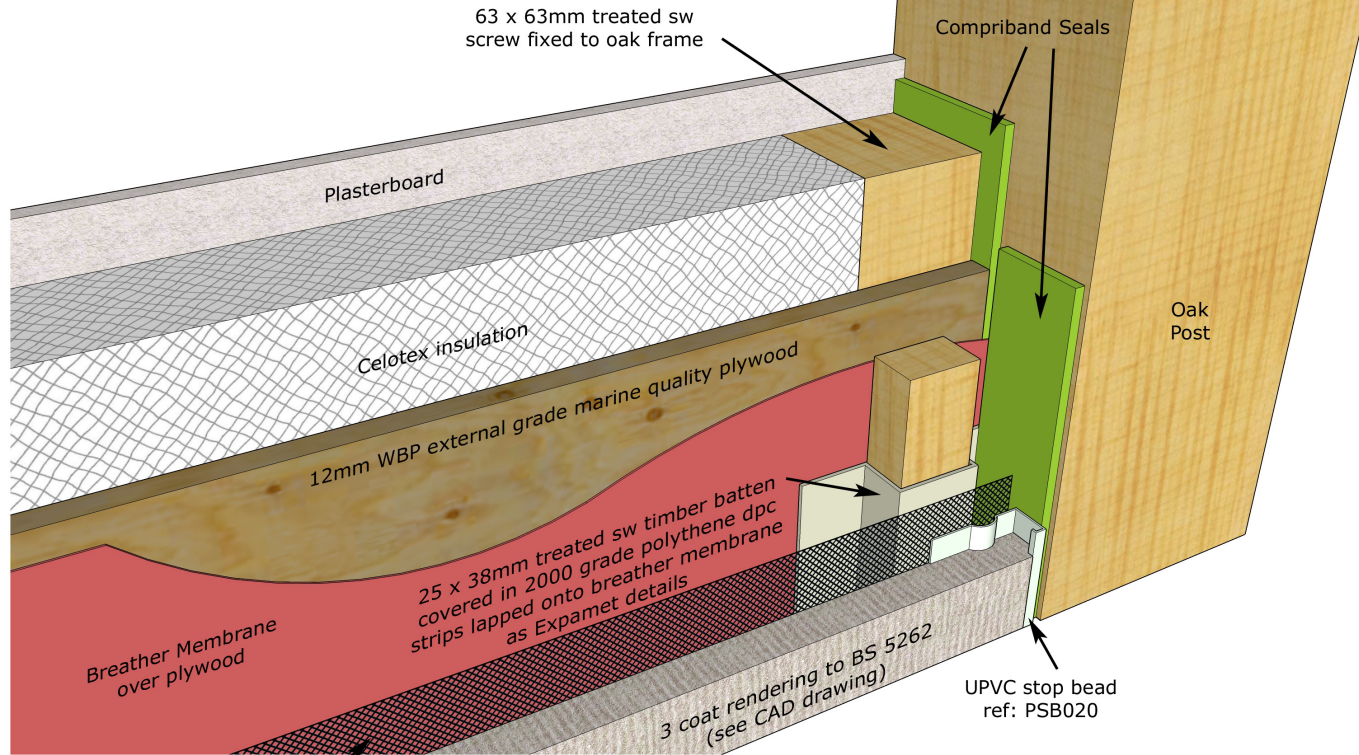
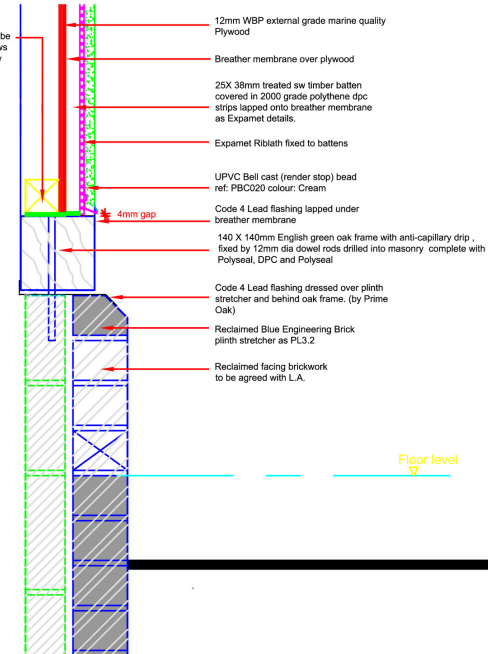


UPVC stop bead
ref: PSB020

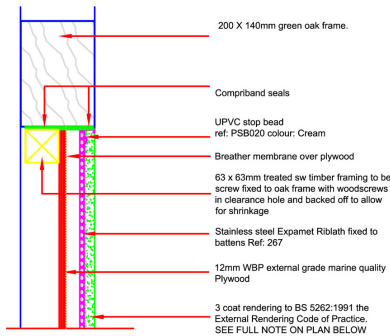

Stainless Steel Expamet Riblath
fixed to battens. Ref: 267

Code 4 Lead flashing lapped under
breather membrane to bottom rail

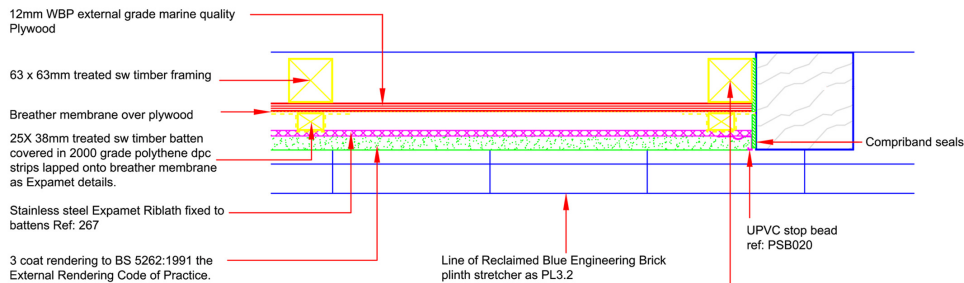

use mix proportions of cement/lime/sand
by volume, based on damp sand, of:-
coat 1 1:1/2:4 1/2
coat 2 1:1:6
coat 3 1:2:9

and use coat thicknesses of:-
coat 1 6 to 7mm in front of lathing
coat 2 10 to 12mm
coat 3 5 to 8mm
Total 28 to 35mm

in warm weather lightly water spray
surface of all coats as soon as the surface
can accept it and for 2 to 3 days
afterwards depending on the severity of
the weather.

Leave at least 7 days between successive
coats

63 x 63mm treated sw timber framing to be
screw fixed to oak frame with woodscrews
in clearance hole and backed off to allow
for shrinkage



Albion Oak

Render Panels