


If the roof is to be warm deck (insulated) with a flush plasterboard ceiling below, then the bracing should be fixed ABOVE the rafters.


Wind Bracing (150 x 25mm) MUST be fixed to underside of rafters.



Wind Bracing in buildings with purlins are usually curved braces fixing the trusses to the purlins

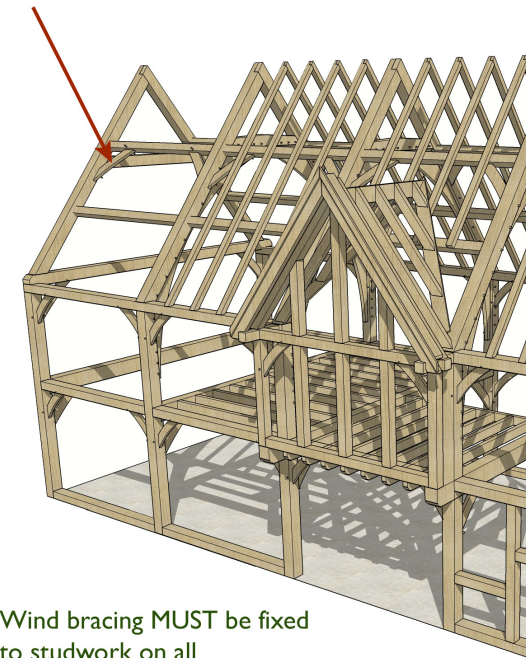

Wind bracing MUST be fixed to studwork on all weatherboarded areas.

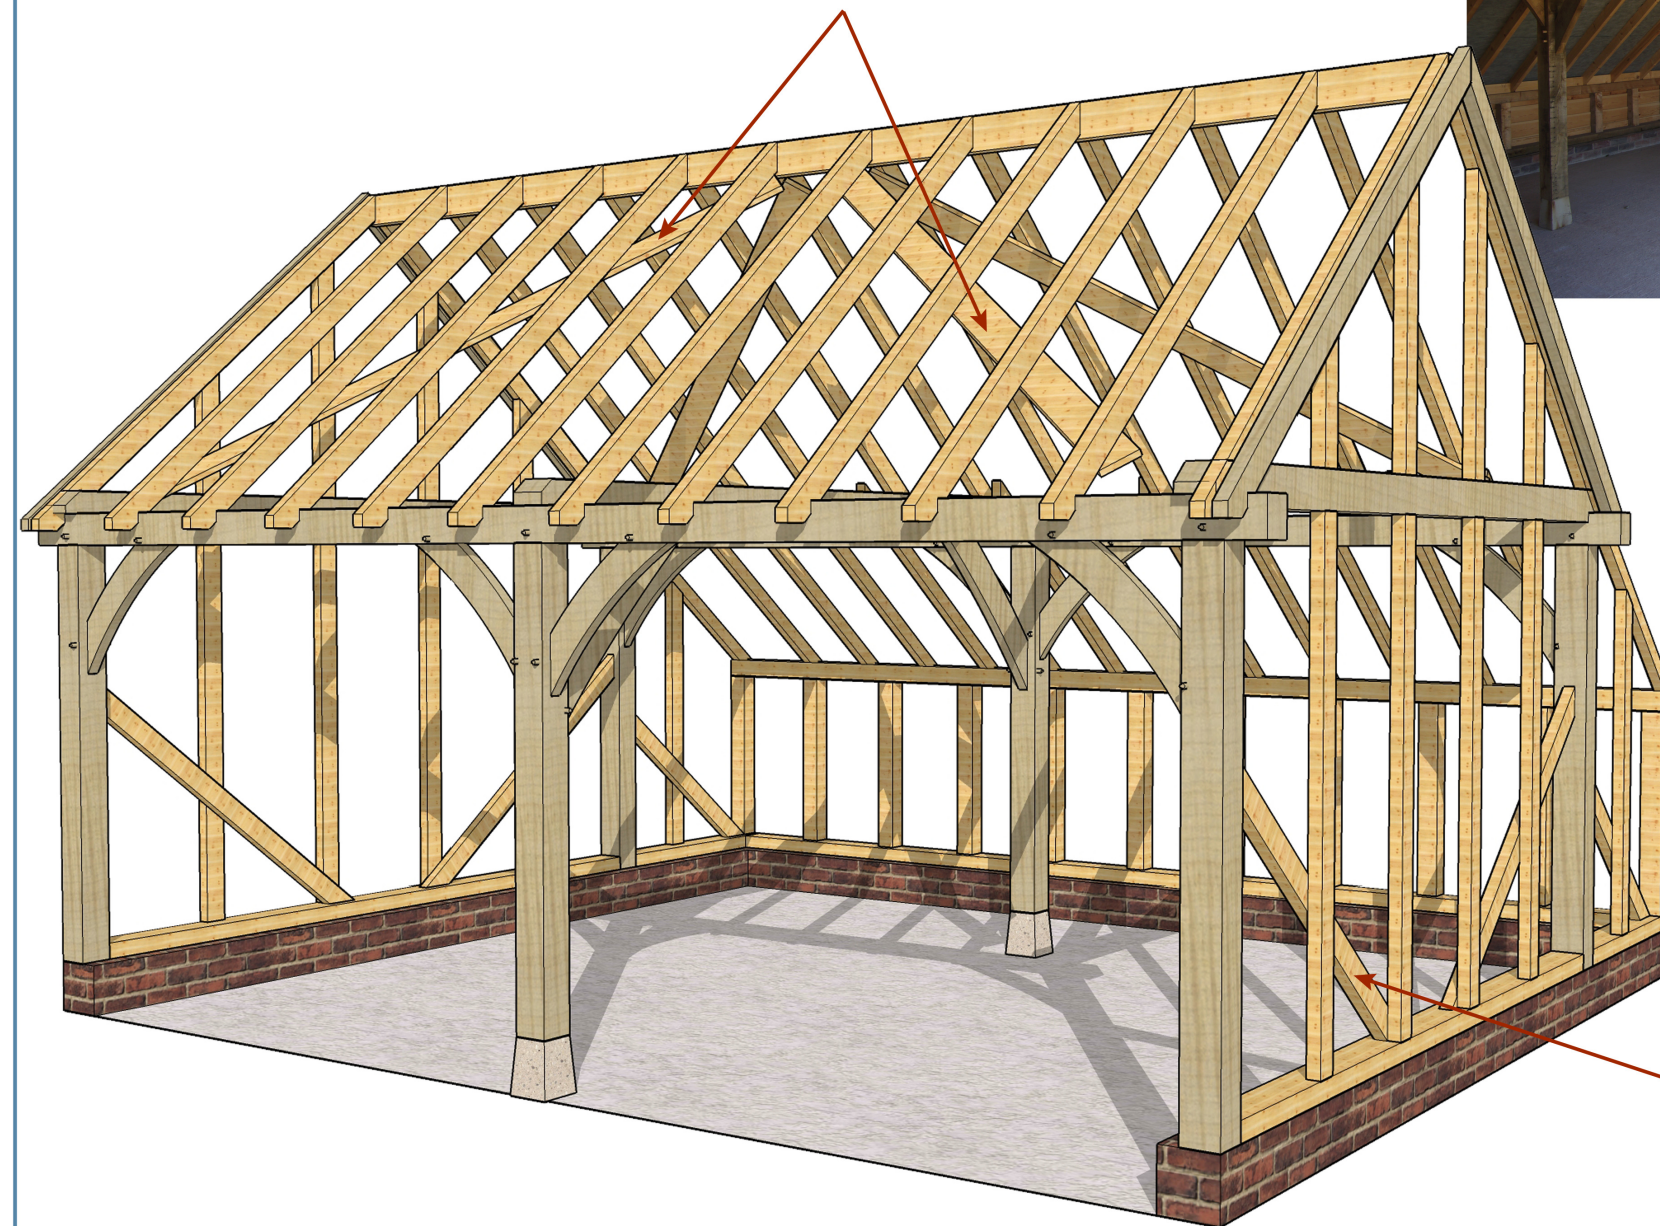

Albion Oak

Wind bracing